

# Golden Spring G-6300, G-6700 and G-3800

## Software

Go to [www.sendspace.com/file/a89z30](http://www.sendspace.com/file/a89z30)

Download and run checking you have the correct comm port

### For G-3800 only.....

1. Press "MENU" button lower part and "UP" button at the same time as turning on the radio
2. You will see the word "CHINA" in the LCD
3. Press "UP" and "DOWN" to change to UHF
4. Press "MENU" button again and wait a moment
5. Run the software and turn on the radio
6. Press "READ" and the software will load the frequency successfully
7. Set all your data and press "WRITE" button, all data will write to your radio

Be aware that every time you connect the software to the radio then the output power will be reset to zero!

I have not found out how to set through software, but this is the way using the radio itself....

- 1) Press key "9" continue to turn on the radio, then you see LOW000.  
- press up or down key to select LOW074 (default setting) and press F9 to save then turn off the radio.
- 2) Then press key "2", then you see HIG000  
- press up or down key to select HIG220 (default setting) and press F9 to save then turn off the radio.

## Scanning

If you cannot scan your memories then make sure each memory has "PRI" showing against each frequency. See item 37. (This is called "Lock the memory channel" in the manual)

I do not know any more than this, but if you find any more info then please let me know

73  
Mike  
G0CVZ

Feb 2013